 


HP LINEAR BARCODE SCANNER

To configure your scanner, please scan the barcodes on this sheet from top to bottom:



ENTER/EXIT PROGRAMMING MODE



Set Global Prefix



8



E



0



0



ENTER/EXIT PROGRAMMING MODE



Set Global Suffix



0



D



ENTER/EXIT PROGRAMMING MODE



ENTER/EXIT PROGRAMMING MODE

Optional: Enable I 2 of 5 Barcodes



ENTER/EXIT PROGRAMMING MODE



I 2 of 5 = Enable



ENTER/EXIT PROGRAMMING MODE

Optional: Enable ASN Barcodes



ENTER/EXIT PROGRAMMING MODE



GS1-128 = Transmit in Code 128 data format



ENTER/EXIT PROGRAMMING MODE